

# andrew James

## Deluxe Blender



Please read the manual fully before using the appliance and keep the manual safe for future reference.

## Contents page

Deluxe Blender Safety Instructions	Page 3
Appliance specific safety instructions	Page 4
Appliance Components Diagram	Page 5
Using the Deluxe Blender	Page 6
Before first use	Page 6
How to operate the appliance	Page 6
Functions	Page 7
Speed settings	Page 7
Useful tips	Page 8
Cleaning and storage	Page 8
Recipes	Page 9
UK and EU Guarantee	Page 11
Electrical information	Page 12
Disposal of the appliance	Page 13

## Safety Instructions

When using any electrical appliance, basic safety precautions should always be followed including:


- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years old.
- Always ensure the voltage on the rating label corresponds to the voltage in your home.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by a qualified electrician or a service repair centre. If in doubt please contact our customer service team.
- The appliance is intended for domestic use only. Industrial or commercial use will void the warranty. The supplier cannot be held responsible for injury or damage if the appliance has been used for anything other than its intended use.
- Incorrect operation and use can damage the appliance and cause injury to the user.
- Do not use the appliance if it has been dropped or damaged in anyway. If the unit has been damaged take the unit for examination and or repair by an authorised service agent.
- Do not immerse or expose the motor assembly, plug or the power cord in water or any other liquid for any reason.
- If the supply cord is damaged, it must be replaced by the manufacturer or by someone who is suitably qualified to avoid a potential hazard.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled or tripped over accidentally.
- Do not allow the cord to touch hot surfaces and do not place the cord near hot gas, electric burners or in a heated oven.
- Use of an extension cord with this appliance is not recommended. However if it is necessary to use an extension cord, ensure that the extension cord is equal to or greater than the power consumption of the appliance to avoid overheating of the appliance and extension cord. Do not use any other appliance on the extension cord. Do not place the extension cord in a position where it can be pulled on by children or animals or be tripped over.

- Always operate the appliance on a smooth, even and stable surface. Do not place the unit on a hot surface.
- Always remove the plug of the appliance safely. Do not pull on the appliances cord to remove the appliance plug from the electrical socket.
- Never handle or operate the appliance with wet hands.

### **Appliance specific safety instructions**

- The motor must always be switched off before the blender is connected to the mains supply.
- Keep hands and utensils out of the blender. A scraper may be used but only when the blender is switched off at the mains.
- Do not operate the blender when it is empty (i.e. without solid or liquid foodstuff).
- Always allow liquids to cool to a lukewarm temperature before you pour them into the blending unit. Do not operate the appliance for more than 1 minute continuously with only one ingredient in the blender, unless you are adding more ingredients. Always operate the blender with the cover in place.
- The blades are sharp, make sure you handle them with care.
- To reduce the risk of injury never place the cutting blades on the base without having the glass jug properly attached.
- When blending hot food stuffs, ensure you put small amounts in the blender as the pressure can build up inside the blender and cause the lid to come off.
- Do not use the blender for very hard food products, such as bones, shelled nuts, frozen meats etc. which could jam the blade and the motor.

## Appliance Components Diagram

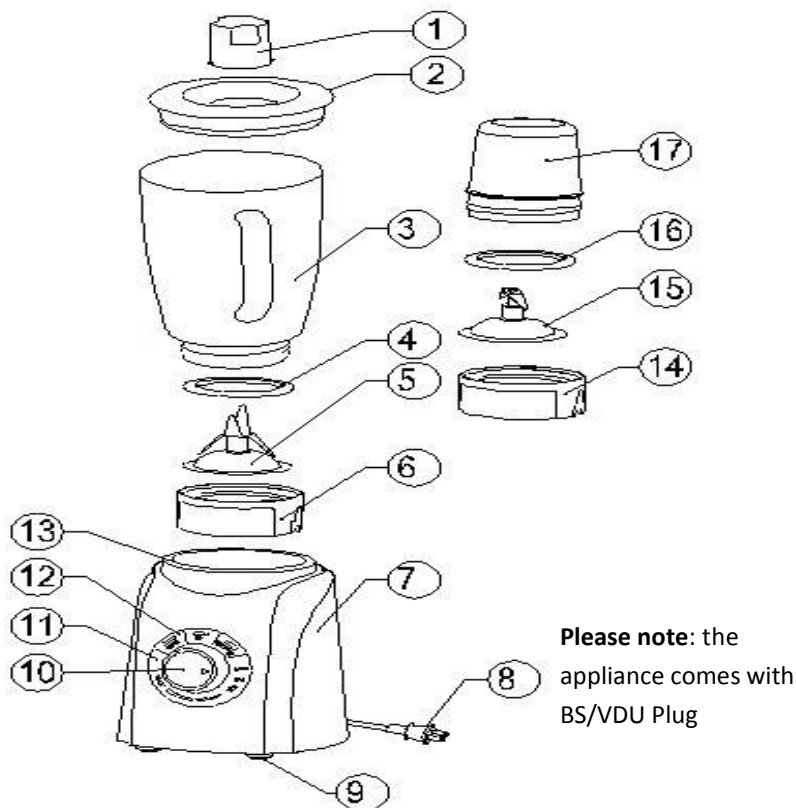

1. Measuring cap	7. Motor base	13. Upper base of housing
2. Lid	8. Power cord and plug	14. Grinder base
3. Glass Jug	9. Anti-slip rubber base feet	15. Grinder blade assembly
4. Rubber seal	10. Speed selector	16. Grinder rubber seal
5. Blade assembly	11. Speed adjustment	17. Grinder glass lid.
6. Jug base	12. Function buttons	

## **Using the appliance**

### **Before use:**

1. Clean the measuring cap, the lid and the glass jug before using the appliance for the first time.
2. Make sure the unit is switched off and do not plug it in before assembling the appliance.
3. First fix the blades and the rubber seal onto the jugs base and fit the base onto the jug.
4. Fix the jug onto the motor base and make sure it is securely fixed to the base.
5. Fill the glass jug with the food you wish to blend and make sure the jug does not overflow with liquid. The maximum capacity of liquid should not exceed 1500 ml.
6. Never use the unit without putting food into the jug.
7. Place the lid securely on the glass jar.
8. Insert the measuring cap in the opening of the lid and turn it counter clockwise to lock it into position.

### **How to operate:**

1. Make sure the speed selector is turned to the “OFF” position and then plug the blender into the mains supply. The blue light around the speed selector indicates that the appliance is connected to the mains supply.
2. This unit is equipped with a safety device and the blender does not operate if the jug is not fixed securely to the motor base.
3. Place the food you wish to blend into the glass jug.
4. Place the lid on the glass jug and close it tightly. Insert the measuring cap in the hole in the lid and carefully turn it counter-clockwise to lock it in position.
5. Fix the glass jug onto the motor base. Turn the Speed Selector to the ‘ON’ position. The blue light around the speed selector gets brighter indicating that the blender can now be used as normal.
6. If you are using the grinder, place the coffee beans in the glass jar. The quantity of coffee beans must be less than 60% of the total capacity of the grinding jar. Place the grinder blade assembly and the rubber seal on the grinder base and firmly fix it to the glass jar. Fix the grinder onto the top of the motor base. Coffee beans may now be ground as normal.
7. To use the “SMOOTHIE”, “ICE” or “PULSE” functions turn the selector switch to the “ON” position and press one of the buttons. The button will light up indicating that the function is operating.

8. To select the speed, turn the selector switch between the “MIN” (low power speed) and “MAX” (high power speed) positions in order to achieve the required speed.
9. It is advised to use the appliance for a maximum of 1 minute continuously and wait for 1 minute before using the appliance again.

## Functions

Smoothie	The blade turns at a high speed, suitable for smooth blending.
Ice	The blade turns at high speeds. It operates for 1 second and shuts off for 0.5 seconds, perfect for crushing ice.
Pulse	The unit operates only when the pulse button is pressed and it shuts off once the button is released. The blade turns at high speed.
Min	The blade turns at a low speed.
Max	The blade turns at a high speed.
On	The unit is switched on and the “Smoothie”, “ice” and “pulse” functions can be used.
Off	The unit is switched off.

## Speed settings

Low: Use with liquids.

High: For a more solid consistency- for blending liquids and solid foods.

Pulse: To soften ice-cream; short, powerful pulse movements.

(The selector switch does not remain in the “Pulse” position when released.

To use this setting you must hold the selector switch in the “Pulse” position or turn it repeatedly to this setting.

**Caution:** Maximum capacity of the glass jug is 1.5L.

### **Useful tips**

- For the best results when blending solid ingredients, place small portions in the glass jug a little at a time.
- If you are blending solid ingredients, cut them first into small portions (2-3cm).
- When blending solid ingredients, start by adding a small quantity of liquid. Gradually add more liquid through the lid opening.
- Always hold the blender top with your hand while the appliance is operating.
- Hold the grinder cup's top during operation to ensure it is steady.
- Proceed carefully when blending thick liquids.
- To blend solid ingredients or very thick liquids we recommend you use the "Pulse" setting to prevent the blades from sticking.
- To crush ice easily, it is advisable to add a small quantity of water.

### **Caution**

If the glass jug is overfilled the blades may not spin freely, preventing the blending cycles from operating correctly. If this happens, switch off the unit and unplug it from the socket. Empty some of the contents and then switch it on again.

### **Cleaning and storage**

Warning: Switch off the unit before cleaning to prevent electric shocks and other hazards.

1. In addition to this, you should read the "Safety precautions" section at the beginning of these instructions.
2. Do not clean the motor base, the power cord or the plug with water.
3. Clean the motor base with a soft, damp cloth and wash it with a mild detergent.
4. Half-fill the jug with hot water and a small amount of mild detergent. Leave the unit to operate at maximum speed until the jug is clean (maximum 1 minute).
5. The jug base can be separated from the jug itself. Unscrew in a counter-clockwise direction and remove the blade assembly together with the rubber seal.
6. Clean the grinder by half-filling the jug with hot water and a little washing up liquid; fix the grinder on to the top of the motor base. Leave the unit to operate at maximum speed until clean. Then use the water to clean all grinder components. (maximum 1 minute).
7. Dry all components well before using again.
8. Caution: The blades are very sharp. Handle with care when cleaning.
9. Never use abrasive detergents.



## Recipes

### Strawberry and Banana Smoothie

#### Ingredients:

Strawberries	Generous handful
Banana	Peeled and sliced
Plain yoghurt	100g
Ice cubes (optional)	Handful

#### Method

Put the strawberries, bananas, plain yoghurt and ice cubes into the blender jug and blend until smooth.

### Pineapple, raspberry and strawberry Smoothie

Pineapple	Sliced
Raspberries	Handful
Strawberries	Handful
Plain Yogurt	100g
Ice cubes	Handful

#### Method

Put the pineapple, raspberries, strawberry, yoghurt and ice cubes into the blender jug and blend until smooth.

## Spicy Tomato Salsa Dressing

### Ingredients:

Canned Tomatoes	400g
Red onion (small)	1
Red chillies (small)	2
Fresh coriander leaves	¼ tbsp
White sugar	1 tbsp
Salt	To taste
Freshly ground pepper	To taste

### Method

Add the canned tomatoes, chopped red onion, chopped red chillies, chilli powder, Coriander leaves and white sugar into the blending jug. Use the pulse option to blend until you get a thick chunky consistency.

Add the salt and pepper if required and put it in the fridge until you need to use it.

## **UK an EU Guarantee**

Your new Andrew James product comes with a 24 month guarantee and a 2 year fixed warranty, effective from receipt confirmation. Your receipt or order number is required as proof of purchase date so it is imperative that you keep it safe. This guarantee only applies if the item has been used solely for the use intended, and all instructions have been followed accordingly. Please note this product is only for domestic use only and not for commercial use.

Abuse of your product will invalidate the guarantee. Returned goods can only be accepted if repackaged properly within the original colour product box, and presented with the original receipt of sale/order number. This does not affect your statutory rights.

Returned products must be cleaned and returned to us in as close to delivery condition as possible.

If your product develops a problem within the first 12 months of the fixed warranty, we will pay all shipping costs to have it returned to us. After 12 months the customer will be liable for the cost of returning the product to us. We will then pay to have the repaired/replaced item shipped back to the customer.

If you wish to return your item for a full refund, you have the right to do so within the first 7 days. For our returns policy please go to [www.andrewjamesworldwide.com](http://www.andrewjamesworldwide.com)

Customers are responsible for any taxes applied to our products when they are shipped outside of the EU.

All of our prices are inclusive of VAT.

Once a product has been returned to us, we will aim to repair or replace it within 30 days of receipt.


The guarantee does not cover any defect arising from improper use, damage, build-up of lime scale or repair attempts made by third-parties. Also, the guarantee does not cover normal wear and tear of individual parts.

## Electrical information


### Please note:

It is extremely important that the wires or cores in the flex are connected to the correct terminals in the plug. If the colour of the mains lead of the appliance does not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

- The **Live (Brown)** wire connects to the right- most live (L) terminal nearest to the fuse.
- The **Neutral (Blue)** wire connects to the left-most neutral (N) terminal.
- The **Earth (Green and Yellow)** wire connects to the central, top most earthed (E) terminal.

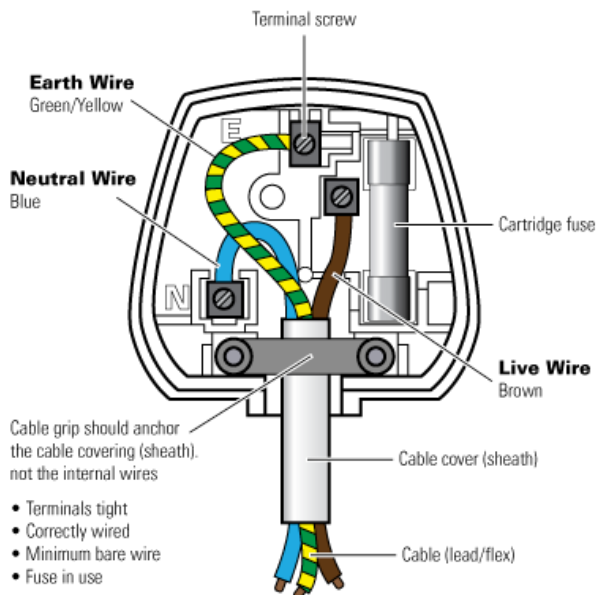

### Warning:

If the appliance is double insulated indicated by the double insulated symbol:  it should not have an earth wire or earth connection.

### Plug

The plug must be protected by the correct AMP fuse; this will be indicated on the case of the plug. Only BSI or ASTA approved fuses should be used. When changing the fuse always replace it with a fuse that is of the same identical rating as the

original. If you are unsure about which plug or fuse to use, always refer to a qualified electrician.

Please note after replacing the fuse, ensure that the cover is correctly fitted back onto the plug. Never attempt to run the appliance if the plug does not have a cover. If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent it from engaging into a socket.

If the supply cord is damaged it must be replaced by a service agent or a similarly qualified person in order to avoid a hazard.

All of our electrical appliances conform to pre-existing EC Directives 2006/95/EC (Low Voltage Directive) and 2004/108/EC (EMC Directives).

For further information please visit <http://www.esc.org.uk/industry/product-safety/product-testing-screening/kitchen-appliances/>

## **Disposal of the appliance**

### **THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!**

Correct disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return



your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.